
Amazon Kindle DX Battery Replacement

This guide will show the user how to correctly access the battery in the device. This will help the user when replacing a battery.


Written By: Lori White

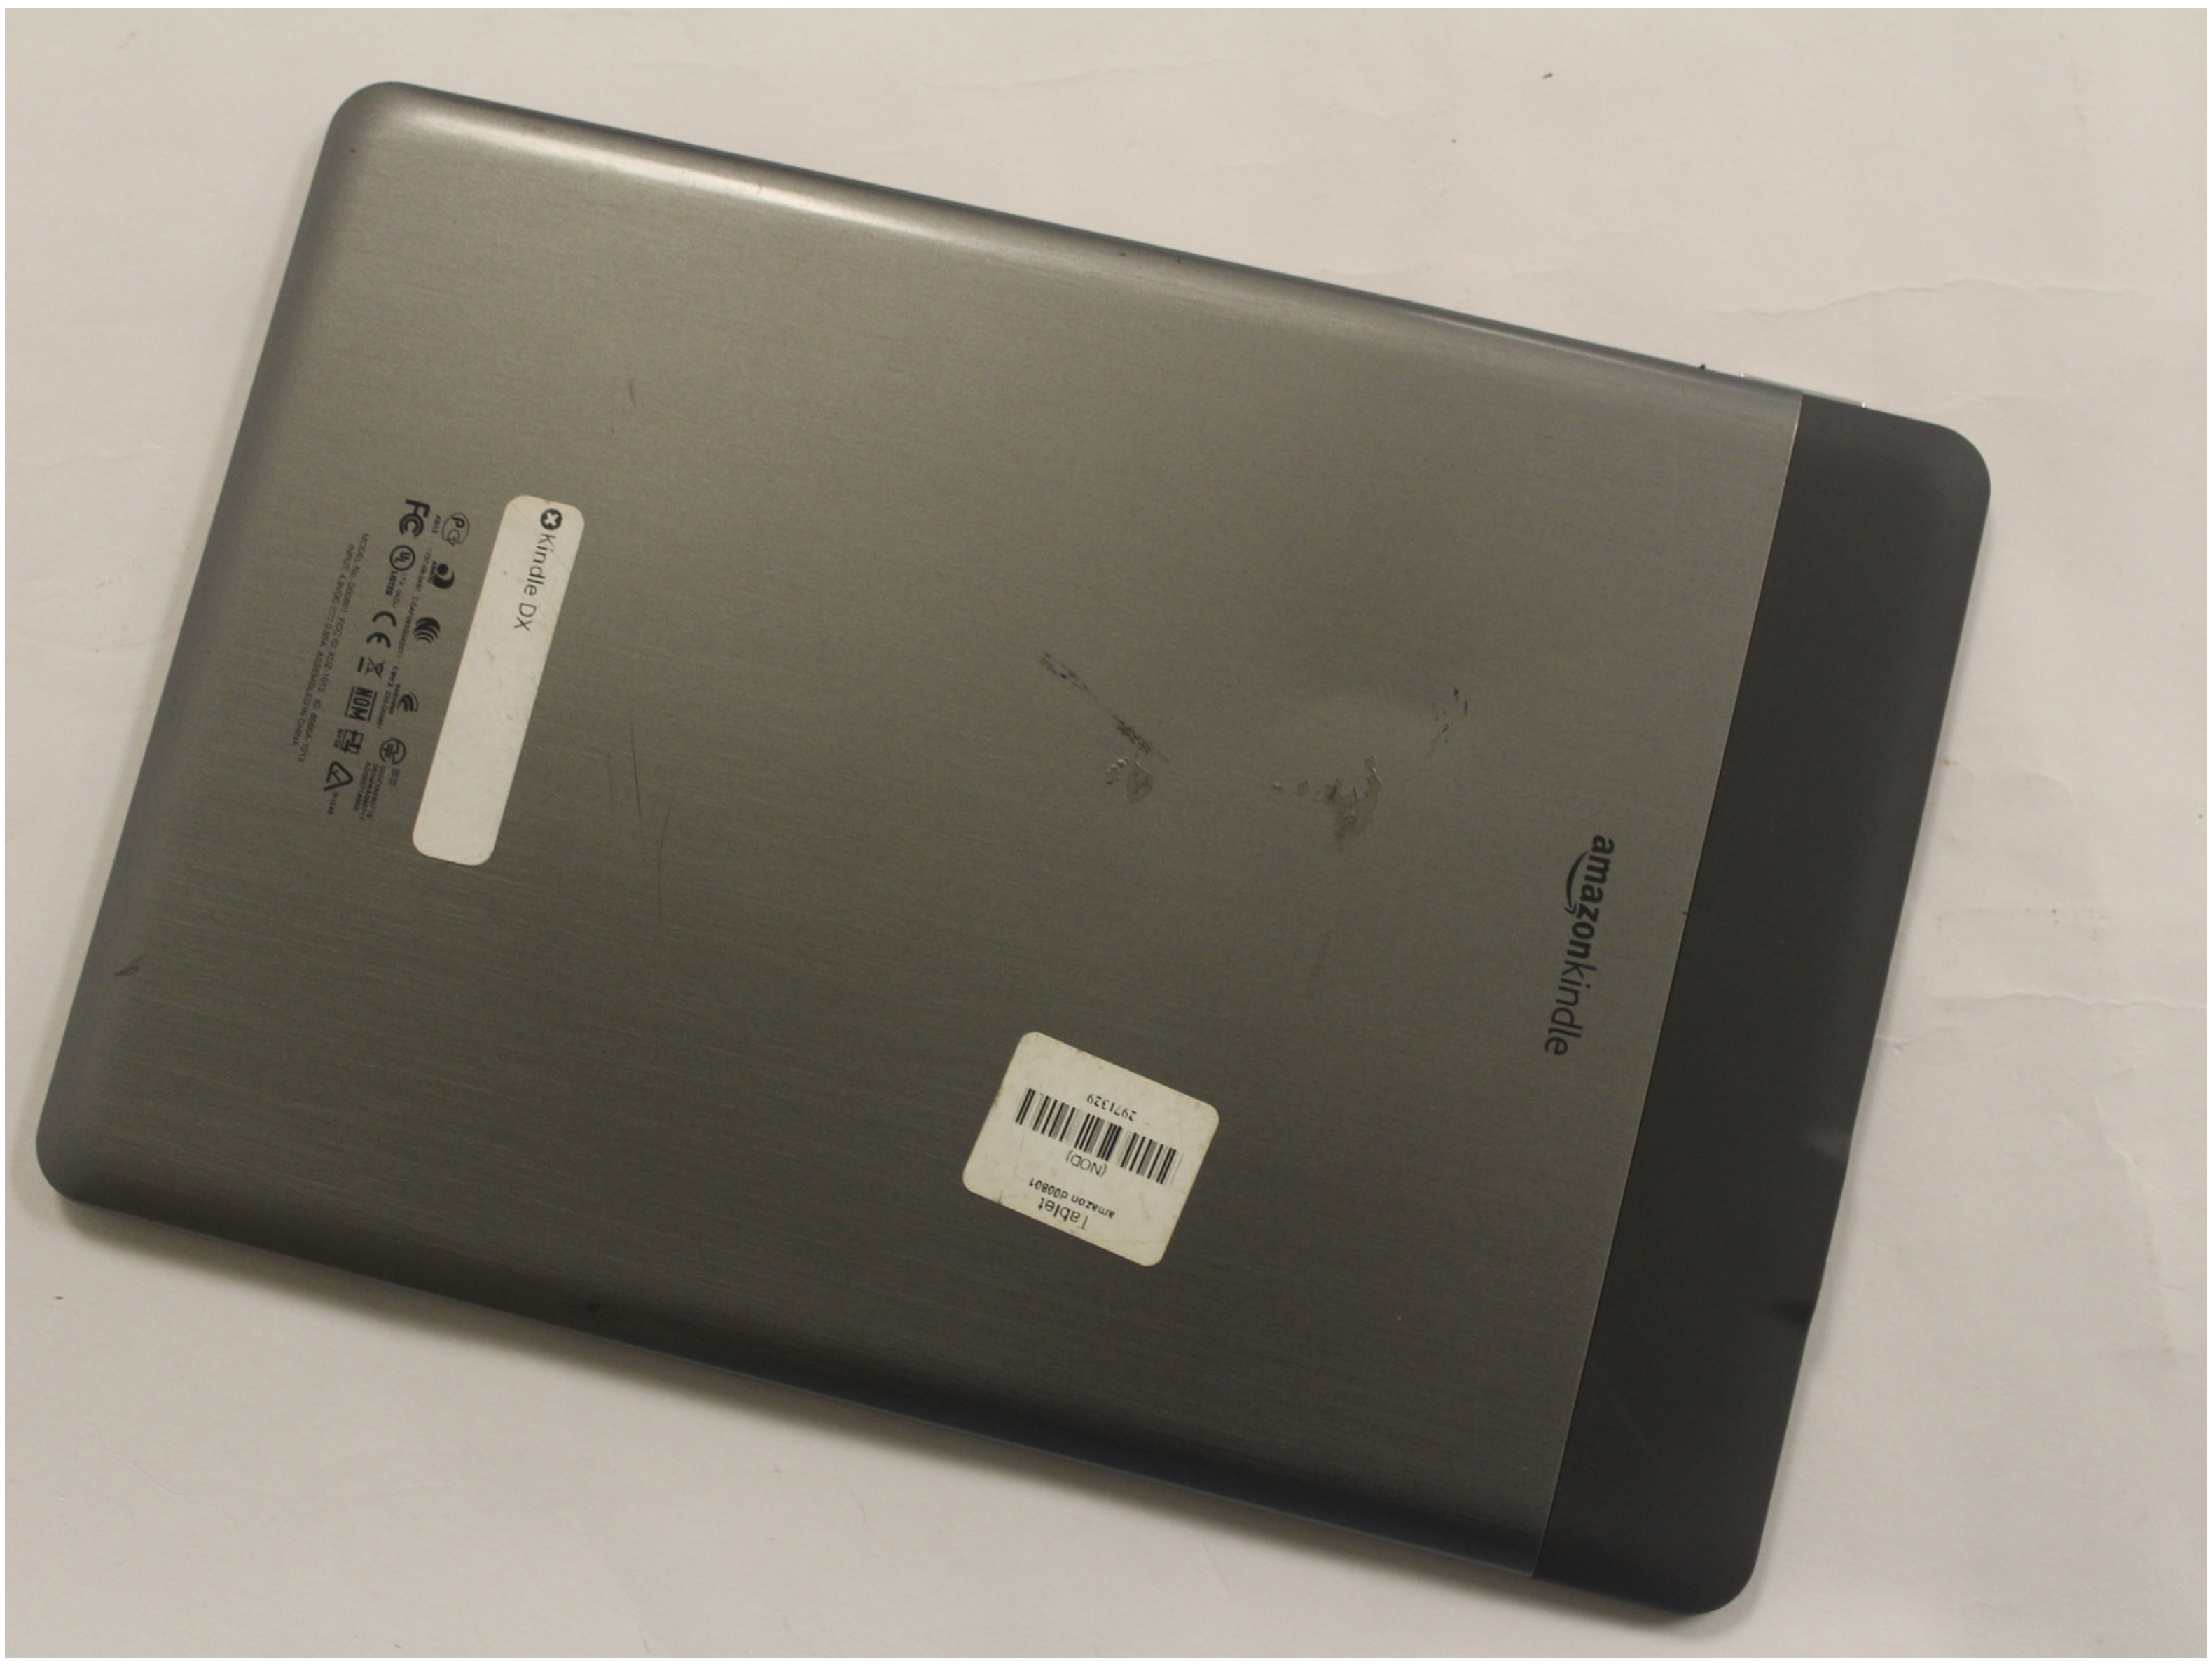

TOOLS:


- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)

Step 1 — Battery




- Take your Kindle DX and flip it to see the back. Use the opening tool from the ifixit toolkit and push it against the top part of the Kindle DX.

Step 2




- Once enough pressure is applied the small piece will pop open.


Step 3



- Remove the plastic piece.


Step 4





- Once the small piece is removed locate the 2 small screws on each corner. Each screw is 40mm long and a Philips screwdriver from the kit with the size PH 0 fits perfectly to remove the screws.

Step 5




- Use the opening tool again to take the off the bigger metal piece.


Step 6



- Once the piece removed locate the battery.

Step 7






- Remove the two screws which are 30mm long and are holding the battery with the device. Use the PH00 Philips screwdriver provided in the toolkit.

Step 8





- Once screws removed you can easily take the battery off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:58:39 PM.

